

Kämmer® LinedFlow™ - 132000 Valves for Corrosive Applications



INDEX

- 1 Using FLOWERVE valves and actuators and accessories correctly**
- 2 Transport and storage**
- 3 Installation**
- 4 Intended use**
- 5 Installation**
- 6 Pressure test pipe section**
- 7 Normal operation and maintenance**
- 8 Trouble-shooting**
- 9 Product description**
- 10 Bonnet**
- 11 Plug and seat**
- 12 Bellows seal**
- 13 Stem**
- 14 Packing**
- 15 Test connection**
- 16 Quick check**
- 17 Maintenance**
- 18 Remove actuator from valve**
- 19 Install actuator on valve**
- 20 Disassemble and assemble valve**
- 21 Trouble-shooting chart**

1. Using Kämmer valves and actuators correctly

1.1 Use

FLOWERVE control valves and actuators are intended exclusively for control of mediums in an approved pressure and temperature range after installation in a piping system and connection of the actuator to the control system.

The permissible pressure and temperature limits are defined in the operating instructions for the individual valve series.

1.2. Terms concerning safety

The safety terms **DANGER**, **WARNING**, **CAUTION** and **NOTE** are used in these instructions to highlight particular dangers and/or to provide additional information on aspects that may not be readily apparent.



DANGER: indicates that death, severe personal injury and/or substantial property damage will occur if proper precautions are not taken.



WARNING: indicates that death, severe personal injury and/or substantial property damage can occur if proper precautions are not taken.



CAUTION: indicates that minor personal injury and/or property damage can occur if proper precautions are not taken.



NOTE: indicates and provides additional technical information, which may not be very obvious even to qualified personnel. Compliance with other, not particularly emphasised notes, with regard to transport, assembly, operation and maintenance and with regard to technical documentation (e.g. in the operating instruction, product documentation or on the product itself) is essential, in order to avoid faults, which in themselves might directly or indirectly cause severe personal injury or property damage.

1.3. Safety Notes for Operator

The manufacturer is not responsible for the following and it is therefore necessary to ensure the following when using FLOWERVE control valves:

1.3.1. ...use valve as intended (Section 1)



DANGER: Never operate a control valve whose approved pressure/temperature range according to the applicable documentation for the valve series is not sufficient for the operating conditions. Moreover, it must be ensured that the valve is approved for the operating medium:



WARNING: Protection against incorrect use of control valve: In particular, it is necessary to ensure that the selected coating on the valve parts in contact with the medium are suitable for the mediums, pressures and temperatures encountered. The manufacturer is not responsible for damage to the valve resulting from corrosive mediums. Failure to observe these precautions can pose a danger for the use and cause damage to the piping system.

1.3.2. ...the piping system and control system must be installed properly and checked regularly. The wall thicknesses of the FLOWERVE control valves correspond to the standards and regulations for the pressure stage requirements of the piping system in question.

1.3.3. ...the valves must be connected properly to this system.

1.3.4. ...the usual flow rates in continuous operation are not exceeded in this piping system and abnormal operating conditions such as vibration, water hammer, cavitation and excessive quantities of solids in the medium – particularly abrasive solids – must be clarified with the manufacturer.



WARNING: At temperatures $> +50\text{ °C}$ and $< -20\text{ °C}$, it is necessary to provide for protection against skin contact including the piping connections.

1.4. Particular dangers



DANGER: The valve stem is sealed with a packing gland. Before loosening or unscrewing the packing nut, ensure that the pressure in the pipeline is completely relieved so that the medium cannot escape through the packing.

Observe the usual safety precautions for hazardous medium – particularly the use of protective clothing – when working on the valves.



DANGER: On valves with a bellows seal also ensure that the bellows does not leak by using a test connection, if present, before removing the packing gland nut.



DANGER: Before removing the valve from the pipeline, ensure that the pressure in the pipeline is completely relieved so that the medium does not escape uncontrolled from the line.



WARNING: If it is necessary to remove a valve from the pipeline, medium can escape from the line or from the valves. In the case of mediums which pose a health danger or other danger, ensure that the pipeline is completely purged before removing the valve.

Observe caution with residues flowing out of the line or remaining in the dead chambers of the valves. In the case of dangerous mediums, observe the usual safety precautions – particularly protective clothing.



WARNING: Disconnect or loosen the fasteners – particularly between bonnet and housing – only after the valve has been removed. When reinstalling, tighten the bolts as specified in these maintenance instructions using a torque wrench.

2. Transport and storage

Handle, transport and store FLOWSERVE control valves carefully.

- 2.1.** Store the valve in its protective packaging and/or with the protective caps on the connection ends. Valves heavier than approx. 10 kg should be stored and transported on a pallet (or similarly supported, where applicable also on the installation site).

WARNING: Do not place unpackaged valves on dirty surfaces with the flange sealing surfaces. Hard and/or sharp particles can damage the plastic lining.

- 2.2.** During storage before installation, the valves should be stored in a closed room as a rule and protected against damaging influences such as dirt or moisture.
- 2.3.** Large valves can be picked up using hoisting belts on the yoke stems / eyes or - if present – on the supporting shackles provided for this purpose. If hoisting belts are used for unpacking, connect them so that the outer piping and attached parts are not damaged.



WARNING: If hoisting belts are used, the center of gravity of the valve can be higher than the connection point. In such cases, secure the valve against turning or support it to prevent injury or property damage.

In the event of transport damage, please contact your FLOWSERVE representative immediately.

3. Installation

3.1. General

The same instructions apply for installing FLOWSERVE control valves in a pipeline as for connecting pipes and similar piping elements with plastic liner materials. For control valves, the following instructions apply in addition. Observe Section 3 for transport at the installation site.



WARNING: Handle valves with particular care and observe instructions for flange connections.

! NOTE: As a rule, additional flange seals are not required.

The counterflanges must have smooth sealing surfaces in all cases, e.g. Form C, Form D or Form E according to Standard DIN 2526 or Form B1 or B2 according to EN 1092-1 or stock finish according to ANSI B16.5. Other flange forms must be coordinated with the manufacturer.

In addition, observe the following for actuators:



WARNING: Never subject actuators to external loads; this can damage the valve – actuators are not step ladders -



WARNING: Heavy actuators must be supported in a suitable manner if it is possible that their installation situation would exert an impermissible bending force on the valve.

4. Intended use

The series 132000 valves from Flowserve Essen GmbH can be installed in all areas endangered by gas explosion, because they do not have any potential ignition sources. The valves can be used for shutting off the flow of noncombustible gaseous mediums and combustible gaseous and fluid mediums far below the maximum explosion limit. Inside the valve the atmospheric range is not reached under the conditions (see table below); here Directive 95/9/EC is not applicable. Please note that certain (non-conductive) mediums at certain flow rates can result in a potential (static charge), which is subject to the operating conditions and therefore is the responsibility of the operator.

Version	Packing	Seat Ring
Standard	PTFE Compound	PTFE Compound

4.1. Description of Unit

The valve is a lined control valve. The housing consists of cast iron and the lining and gaskets are of elastomer material.

The compatibility of the materials used with the surrounding mediums must be observed in particular by the operator.

4.2. Evaluation

Conformance with EN 13463, Parts 1 through 8 (nonelectrical explosion protection)

The fittings fulfill the following requirements.

- 4.2.1** All exposed parts were subjected to the impact and environmental stress tests in conformance with EN 13463-1 by the manufacturer and satisfy the requirements.
- 4.2.2** The valve body for the valves consists of cast iron. Formation of sparks resulting from the effect of exterior impact is excluded under normal conditions.

5. Installation



WARNING: Plastic liners on the valves require particular protection before/during installation; therefore:



CAUTION: Transport valve to installation site in protective package if available. If flange covers are present, remove them only immediately before installation.

- 5.1** Check valve for transport damage. Do not install damaged valves.
- Ensure that only valves are installed whose pressure class, type of connection and connection dimensions satisfy the installation conditions. See Markings and Valve specifications.
-  **DANGER: Do not install valves whose approved pressure and temperature range is not sufficient for the operating conditions. The limits for use are marked on the valves. Moreover, use only valves suitable for the operating medium in question.**
- Failure to observe these precautions can pose a danger for the user and cause damage to the piping system.
- 5.2** The actuator must correspond to the intended connections and control data.
- 5.3** The connection flanges must be inline with the valve connections and parallel. Connection flanges which are not parallel can damage the plastic liner during installation!
- 5.4** Before installing, thoroughly clean the valve and the pipeline to remove any contamination, particularly hard foreign particles.
- 5.5** In particular, it is necessary to ensure that the sealing surfaces on the flange connection are free of all contamination when installing.
- 5.6** When inserting the valve into a pipeline already installed, the distance between the ends of the pipeline must be sufficient to prevent damage to any of the sealing surfaces.



WARNING: Tighten all flange connections to the torques specified in Tables 1a or 1b. When using torque wrenches, ensure that these torques are reached, however not exceeded.

The values in the table apply for flanges according to EN1092, PN10/16 for a maximum operating pressure of 10 bar. Values for other flanges can be obtained from the manufacturer.

- 5.7** Valves are to be installed in the appropriate flow direction. The flow direction is indicated by an arrow on the valve.
- 5.8** Observe the appropriate instructions for connecting the actuator to the valve. Control valves are equipped with a positioner. The connections for air supply and signals are marked clearly (see also applicable operating instructions for the positioner). The maximum air supply is specified on the name plate. If the air supply exceeds the pressure specified on the rating plate, a pressure reduction station is required. If no instrument air is available, install an air filter in the air supply line if required.
- 5.9** After completion of installation, perform a function test with the control signals: The valve should open and close properly corresponding to the control commands. Always eliminate any recognizable malfunctions before startup. See also applicable sections in maintenance regulations for this valve series.



DANGER: Improperly executed control commands can pose a danger for life and limb and damage to the piping system and/or the valve.

6. Pressure testing piping section

The valve has already been pressure-tested by the manufacturer. When pressure testing a section of the pipeline with valves installed, observe the following:

- 6.1** First thoroughly flush newly installed piping systems to remove all foreign objects.
- 6.2** Valve opened: The test pressure should not exceed the value of 1.5 x PN (according to nameplate):
- 6.3** Valve closed: The test pressure should not exceed the value 1.1 x PN (according to nameplate).

If a leak occurs on the valve, observe Section 8 "Troubleshooting".



CAUTION: If the flange connection with plastic liner leaks:

First retighten flange connection to torque specified in Table 1a or 1b in Section 5.6 (installation).

If the flange connection is still leaks:

Loosen flange connection. Check the flange connection to ensure that it is smooth and parallel.

Check the sealing surfaces on both flanges: When the inner lining is damaged, replace valve and/or counterflange.

DN [mm]	15	20	25	40	50	80	100	150
M _A [Nm]	10	18	25	50	65	65	65	140

Table 1a: Tightening Torques for Flange Connections, Flanges EN1092 (DIN)

NW [inch]	1/2"	3/4"	1"	1 1/2"	2"	3"	4"	6"
M _A [Nm]	8	11	15	26	60	100	76	100

Table 1b: Tightening Torques for Flange Connections, Flanges EN1759 (ANSI)

7. Normal operation and maintenance

These installation, operating and maintenance instructions cannot contain all detailed information on all possible versions for reasons of clarity and, in particular, cannot take into consideration all imaginable cases for setup, operation and maintenance. Therefore, only primarily instructions are contained, which are required for the intended use in industrial applications. If anything is not clear, particularly if any detailed information on the specific product is missing, clarify as required with the responsible FLOWERVE representative.

8. Troubleshooting

When troubleshooting or during general maintenance, always observe Section 1 "Safety precautions".



DANGER: If a valve contaminated with dangerous substances has to be removed from the system or pipeline, decontaminate it properly before performing further maintenance work.

9. Product description

9.1 Housing

The body material is made of GGG40.3 (standard), other body materials are also available from the manufacturer on request. For valve bodies with plastic liners: See Table 2b for coating materials.

The liner thickness is at least 5 mm for DN25 and higher and 3.5 mm for DN15 and DN20.

10. Bonnet

The bonnet is connected with a form fit to the valve body providing, on the one hand, a potential compensation between the housing and bonnet and

on the other a defined compression force for the body seal and bellows. The bonnet is provided with a blowout safety system. This means that the valve stem cannot be pulled or pressed upward out of the bonnet.

11. Plug and seat

The seat and plug are screwed, i.e. replacement is possible at any time when the Kvs value changes or for repair. The plug is screwed to the bellows and secured against loosening by a PTFE insert. For smaller Kvs values, a Hastelloy insert can be provided in the plug as well as in the seat (see Table 3).

The possible material combinations and available Kvs values and curves are shown in Table 3.

12. Bellows

The bellows seal is manufactured from modified PTFE. TF1620 for DN15, DN20 and DN25 and TFM1600 for sizes DN40, DN50, DN80 and DN100. The bellows is designed and tested on a standard basis for an operating pressure of 16 bars at 120 °C. The pressure/temperature limitations are limited only by the lining material, not the bellows: Observe the additional operating forces required by the bellows for sizing your actuator.

Body material	0.7043 (GGG40.3)
Pressure class	PN16
End connections (Flanged)	DIN PN 16 ANSI Class 150
Liner thickness	4 – 6 mm

Table 2a: Body Specifications

PFA	Perfluoralkoxypolymer (Standard)
PFA conductive	Perfluoralkoxypolymer, electrically conductive
PVDF	Polyvinilidenfluoride
ETFE	Ethylene Tetrafluorethylene- Copolymer (Tefzel®)
FEP	Tetrafluorethylene Perfluorpropylene
PP	Polypropylene

Table 2b: Liner Materials

Kämmer® LinedFlow™ - 132000
Valves for Corrosive Applications

		Plug	Valve Size								Hastelloy	Hastelloy	TFM1600
K _{vs} / C _v -Values		Seat		DN15/ 20	DN 25	DN 40	DN 50	DN 80	DN 100	DN 150	Hastelloy	TFM1600	TFM1600
K _{vs}	C _v	Seat ø		0.5”/ 0.75”	1” 0.5”/ 0.75”	1½”	2”	3”	4”	6”			
		mm	in.	Stroke (mm/inch)									
0.011		3	0.12	10/0.39	10/0.39						x		
0.017		3	0.12	10/0.39	10/0.39						x		
0.025	0.029	3	0.12	10/0.39	10/0.39						x		
0.040	0.047	3	0.12	10/0.39	10/0.39						x		
0.063	0.074	3	0.12	10/0.39	10/0.39						x		
0.10	0.12	4.5	0.18	10/0.39	20/0.79							x	
0.16	0.19	4.5	0.18	10/0.39	20/0.79							x	
0.25	0.29	4.5	0.18	10/0.39	20/0.79							x	
0.40	0.47	4.5	0.18	10/0.39	20/0.79							x	
0.63	0.74	4.5	0.18	10/0.39	20/0.79							x	
1.0	1.2	7	0.28	10/0.39	20/0.79								x
1.6	1.9	7	0.18	10/0.39	20/0.79								x
2.5	2.9	10	0.25	10/0.39	20/0.79								x
4.0	4.7	12	0.30		20/0.79	20/0.79							x
5.0	5.8	15	0.38	10/0.39									x
6.3	7.4	16	0.41		20/0.79	20/0.79	20/0.79						x
10	12	20	0.51			20/0.79	20/0.79						x
13		25	0.64		20/0.79								x
16	19	25	0.64			20/0.79	20/0.79	40/1.57					x
25	29	32	0.81				20/0.79	40/1.57					x
32		40	1.02			20/0.79							x
40	47	40	1.02					40/1.57	40/1.57				x
47		50	1.27				20/0.79						x
63	74	50	1.27					40/1.57	40/1.57				x
100	120	63	1.60						40/1.57	40/1.57			x
120	139	80	2.03					40/1.57					x
160	190	80	2.03							40/1.57			x
180		100	2.54						40/1.57				x
250	290	100	2.54							40/1.57			x
340	400	125	3.18							40/1.57			x

Table 3: K_{vs} / C_v Values

Size	Seat/Plug	Stroke (mm)	Bellows Material	Part No.	Effective area (cm ²)
DN 15	TFM1600	10	HS22121	132538501	6,4
DN 20	TFM1600	10	HS22121	132538501	6,4
DN 25	TFM1600	10/20	HS22121	132538601	8,6
DN 40	TFM1600	20	HS22121	132538802	8,6
DN 50	TFM1600	20	HS22121	132538802	8,6
DN 80	TMF1600	40	HS22121	132538901	13,2
DN 100	TFM1600	40	HS22121	132538901	13,2
DN 150	TFM1600	40	HS22121	132539101	13,2

Tabelle 4: Bellows Seal

13. Stem

The valve stem is equipped with a blowout protection feature. This ensures that the valve stem cannot be removed from the top of the valve. This is an important safety factor when the actuator is removed from the valve, because there would be otherwise no mechanical restriction.

Valve stem	1.4571 (Standard) 2.4819 (Hastelloy C276) (optional)
------------	---

14. Packing

The 132000 valve series has a safety packing to back-up the bellows seal and to prevent leakage to the outside in the event of a bellows rupture.

15. Test connection



WARNING: If the optional test connection (1/4" NPT) is present, it must be sealed to prevent the medium from exiting in the event of a bellows rupture.

16. Quick check

Before operating, check the valve as follows:

- 16.1** Open and close the valve and observe the movement of the actuator stem. The movement should be smooth and linear.
- 16.2** Check the minimum stroke by changing the control signal (for pneumatic position regulator 0.2 – 1.0 bar or corresponding "split range" values for IP position regulator 4-20 or 0-20 mA).

- 16.3** Check all air connections for leaks.

- 16.4** Check the packing nut (see Table 8).



CAUTION: An excessively tightened gland nut can cause excessive packing wear and can hinder the free movement of the plug stem.

- 16.5** Check fail-safe position. To do this, close supply pressure and observe whether the valve opens or closes as defined.
- 16.6** After use under varying temperatures, retighten all threaded connections and check for leaks.

17. Maintenance

Check for proper function at regular intervals as follows. These checks can be accomplished in the installed state and, in many cases, without shutting down production. If internal defects are suspected, see section "Disassembly and assembly of valve".

- 17.1** Check gaskets for leakage and retighten bolts if required (see Fig. 1).
- 17.2** Check bellows seal, test connection and body drain screw – if present – for leakage to the outside.
- 17.3** Check valve for damage resulting from corrosive process residues or corrosive vapors.
- 17.4** Clean valves and repaint as required.

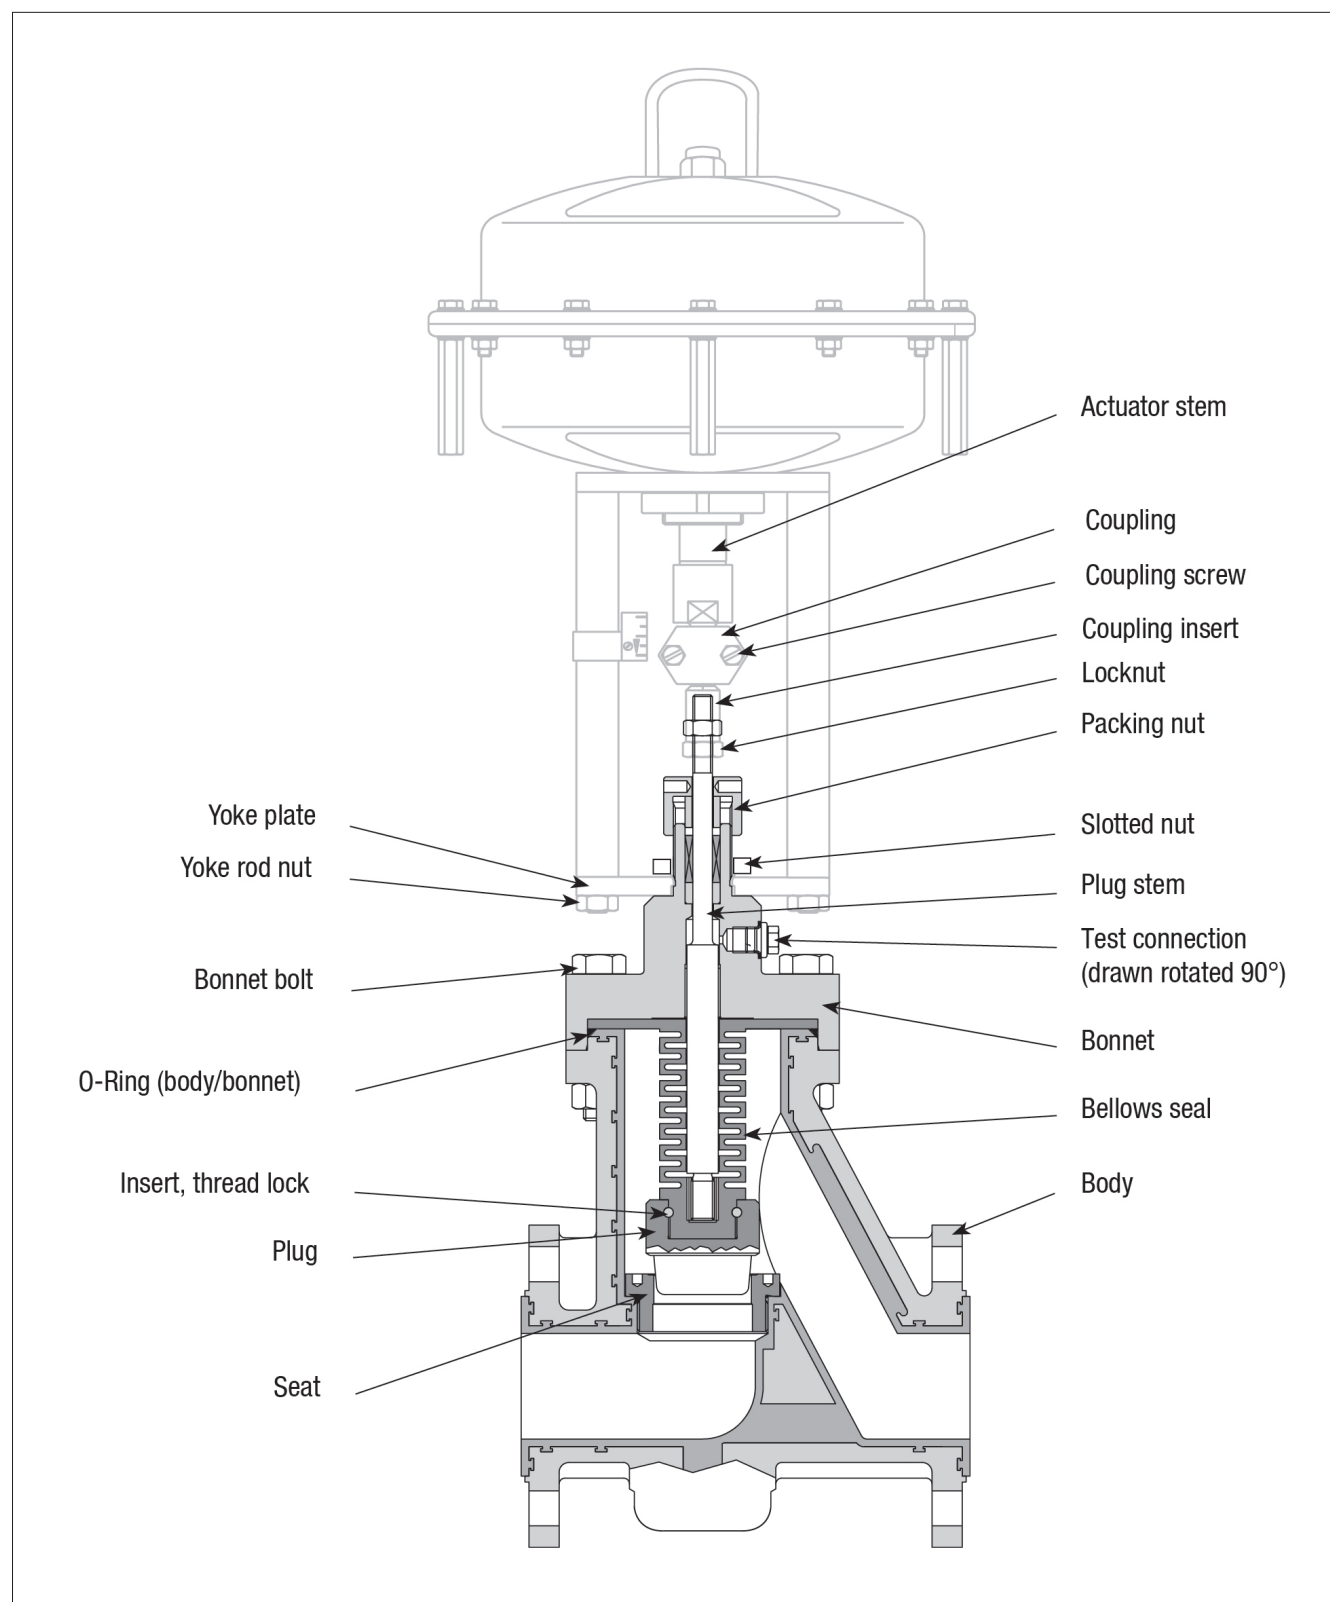


Fig. 1: Typical Valve Series 132000 with Series 2 Actuator

18. Removing actuator from valve

(See Fig. 1)

18.1 Shut off air supply.



DANGER: Ensure that actuator is not under pressure and drain process medium before performing maintenance work. Failure to observe can lead to serious injuries.

18.2 Remove piping if required.

18.3 Remove 2 coupling bolts and remove coupling.

18.4 Loosen yoke stem nuts and remove. Carefully remove actuator from valve.

18.5 After loosening counternut, unscrew coupling insert (caution: hold plug with wrench on coupling insert to prevent turning).

19. Attaching actuator to valve

(See Fig. 1)

The actuator stem must be fully extended:

Actuators with air-to-open action must be fully vented.

Actuators with air-to-close action apply supply pressure.

Manually depress the plug stem to ensure the plug is fully seated.

The valve plug must make contact in the valve seat, i.e. press valve stem in all the way by hand.


19.1 Screw coupling insert locknut and coupling insert as far as possible onto plug stem.

19.2 Place the actuator assembly on the valve engaging the yoke rod threads in the lower yoke plate and ensuring the actuator faces in the correct direction.

19.3 Unscrew the coupling insert until the yoke rods are raised from the lower yoke plate by around 2 mm.

! NOTE: Ensure that the plug assembly is not rotated with the plug seated. This may cause irreparable damage to the seating faces.

19.4 Refit the coupling, ensuring that the arrows, embossed on the coupling halves, point upward towards the actuator, and secure with 2 retaining screws.

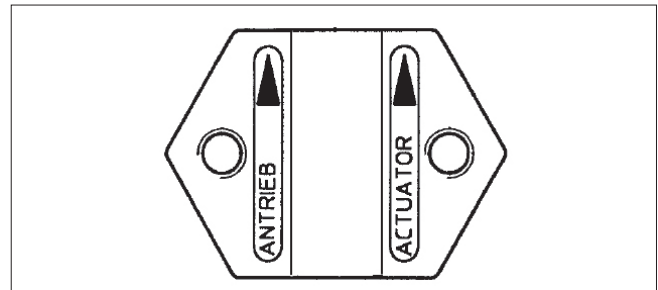

19.5 Apply supply pressure resp. vent actuator to half stroke and refit and tighten yoke rod retaining nuts.

19.6 Reconnect all tubing.

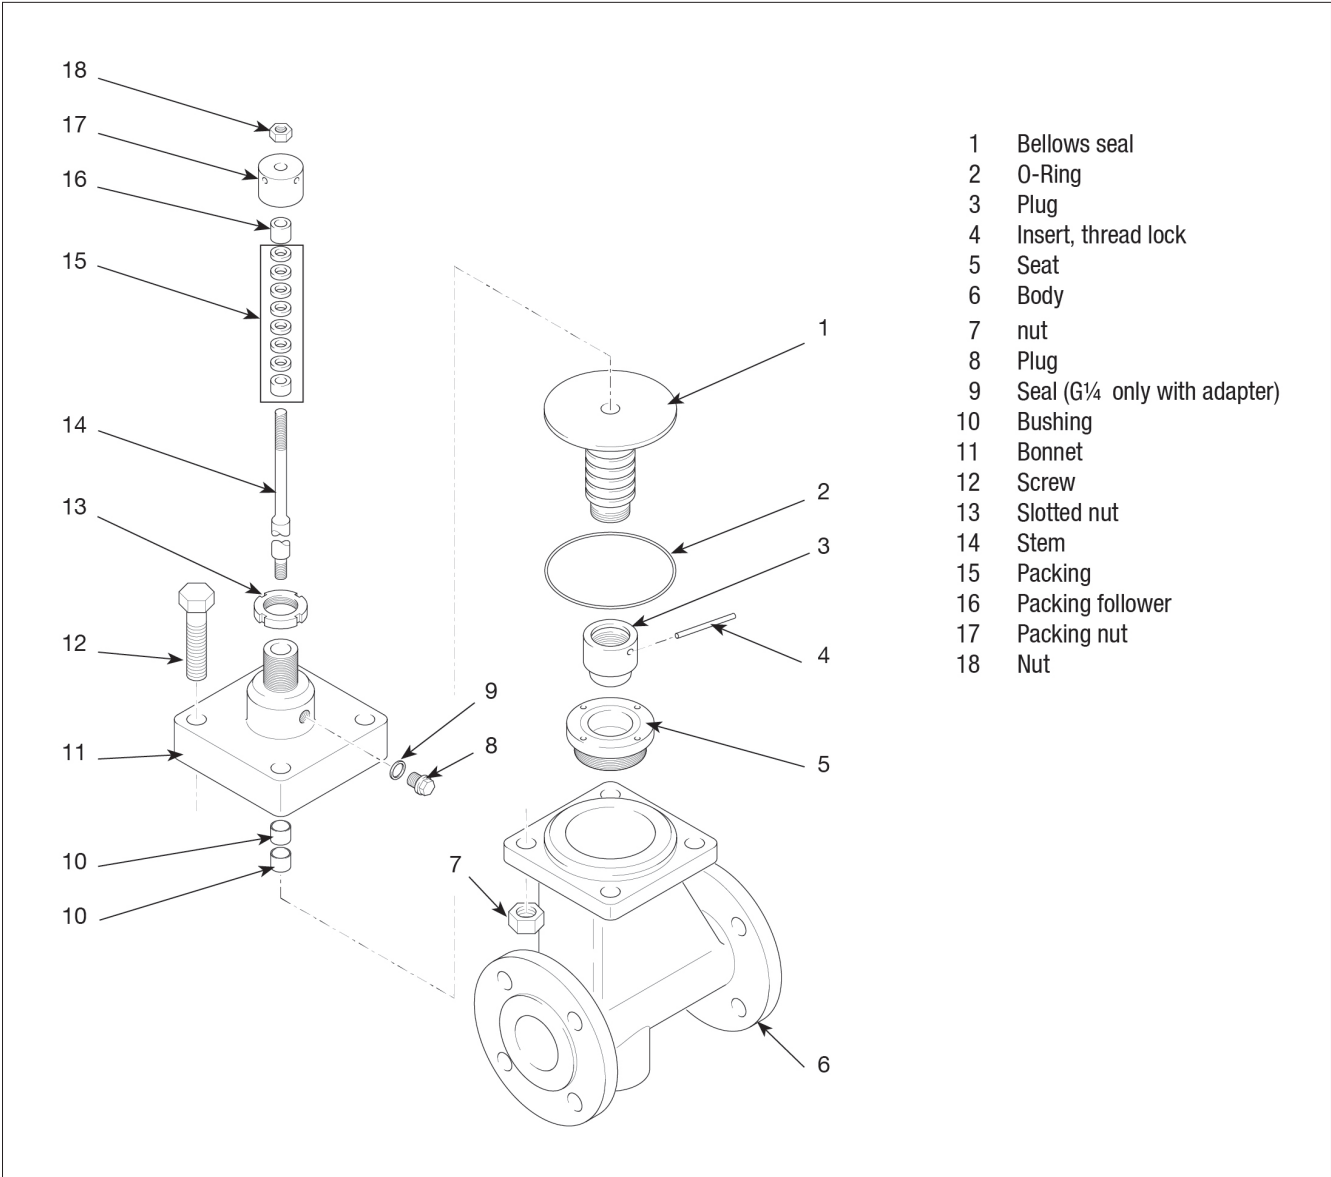


Fig. 2: Individual Parts for Series 132 000 (also see spare parts lists)

DN 15	DN 20	DN 25	DN 40	DN 50	DN 80	1DN 100	DN 150
6	6	6	25	25	35	55	70

Table 6: Tightening Torque for Seat (Nm)

DN 15	DN 20	DN 25	DN 40	DN 50	DN 80	1DN 100	DN 150
60	60	60	145	145	145	280	250

Table 7: Tightening Torque for Bonnet Fastners (Nm)

20. Disassemble and assemble valve

20.1 Disassemble valve

(see Fig. 2)



DANGER: As toxic or hazardous substances could be present, release all pressure in the system and drain all process substances. If necessary, decontaminate valve. Keep hands, hair and clothing away from moving parts. Wear face and eye protection. Failure to observe can lead to severe injuries.

20.1.1 Carefully loosen test connection and check whether medium has collected in bellows cap (bellows defective).

20.1.2 Remove bolts/nuts from bonnet and remove bonnet.

! **Note:** Due to packing friction the bellows/plug is usually pulled out when the bonnet is removed. In such cases, hold the bellows/plug so that it cannot fall and be damaged.

20.1.3 If the bellows remains in the housing, it can be pried out carefully with two screwdrivers.

20.1.4 Without stretching the bellows, remove the plug/bellows assembly from the bonnet. Press guides, packing and spacer out of packing chamber from below with a punch (the punch diameter should be slightly larger than the plug stem).

20.1.5 If required, pull out thread lock insert with a pair of pliers and unscrew plug from bellows.



WARNING: When the plug is loosened, medium residues can be released which have leaked through the thread.

20.1.7 Unscrew seat ring with seat ring wrench.

20.1.8 Check sealing edges on seat ring and plug for damage. The sealing surfaces must be clean and free of damage.



WARNING: To avoid damage to the seat, plug or plug stem, observe the preceding instructions exactly.

20.2 Assemble valve

(see Fig. 2)

20.2.1 Replace all worn or damaged parts. Use only genuine FLOWSERVE parts. Parts to be reused must be clean. Always replace parts subject to wear such as gaskets, packings and O-rings.

20.2.2 Insert seat ring and tighten (see Table 6 for torque).

20.2.3 Screw plug onto bellows hand-tight and insert a new thread lock insert. Cut off thread lock insert so that approx. 3 mm extends from the hole.

20.2.4 Carefully insert plug stem with bellows into bonnet.

20.2.5 Position new O-ring on inclined surface on top of housing.

20.2.6 Position bonnet slowly and absolutely upright on body, to avoid damage to seat/plug.

20.2.7 Insert bonnet mounting bolts and tighten hand-tight in crisscross pattern.

20.2.10 Tighten all bolts to specified torques in crisscross pattern with torque wrench (see Table 7).

20.2.11 Replace packing by inserting packing rings one at a time tapping each one down with a suitable bushing.

! **NOTE:** ensure that the gaps in the packing rings are distributed evenly around the circumference in the packing box (gaps not in line).

Different packings and fitting sequences are shown in the spare parts list.

20.2.12 Insert packing follower and tighten packing nut (see Table 8).

20.2.13 During the subsequent pressure test, ensure that the pressure does not exceed the maximum permissible pressure for the bellows (PN16). After checking the test connection for leakage – if present – plug with a plug or appropriate pressure gauge.

Thread	PTFE
M20 x 1,5	1
M30 x 1,5	6
M38 x 1,5	15
M45 x 1,5	17

Table 8: Tightening Torque for Packing Nut (Nm)

21. Trouble-Shooting chart

Fault	Possible Cause	Remedy
Stem motion impeded	1. Packing excessively tightened 2. Operating temperature too high for selected trim 3. Supply pressure inadequate 4. Positioner defective	1. Tighten gland nut 2. Note operating data and contact dealer 3. Check system for leaks in the supply pressure or signal lines. Retighten the connections, if necessary replace leaky lines 4. See operating instructions for positioner
Excessive leakage	1. Bonnet loose 2. Worn or damaged seat ring/plug 3. Gaskets damaged 4. Inadequate actuator thrust 5. Plug incorrectly adjusted 6. Incorrect direction of flow 7. Handwheel incorrectly adjusted (acts like end stop)	1. See step 20.2.7 for correct tightening of bonnet 2. Re-machine or replace seat ring/plug 3. Replace gaskets 4. Check air feed. If air feed is OK, contact dealer 5. Correctly adjust plug according to step 6. Check specification. Contact dealer 7. Adjust handwheel
Inadequate flow	1. Plug incorrectly adjusted (short stroke) 2. Positioner defective 3. Operating requirements too high	1. Correctly adjust plug 2. See operating instructions for positioner 3. Check operating data. Contact dealer
Plug slams	1. Plug adjustment incorrect 2. Inadequate supply pressure 3. Trim too large for flow rate	1. Correctly adjust plug 2. Check supply pressure, seal leaks, remove blockage 3. Replace trim



Germany

Flowserve Essen GmbH

Schederhofstr. 71

45145 Essen

Deutschland

Tel.: +49 (0)201 8919 5

Fax: +49 (0)201 8919 662

USA

Flowserve Flow Control Division

1350 N. Mountain Springs Parkway

Springville, UT 84663

USA

Tel.: +1 801 489 8611

Fax: +1 801 489 3719

Singapore

Flowserve Pte Ltd

12 Tuas Avenue 20

Singapore, 638824

Singapore

Tel.: +65 6879 8989

Fax: +65 6862 4940

Headquarters

Flowserve Corporation

5215 North O'Connor Blvd.

Suite 700

Irving, Texas 75039-5421 USA

Flowserve Corporation has established industry leadership in the design and manufacture of its products. When properly selected, this Flowserve product is designed to perform its intended function safely during its useful life. However, the purchaser or user of Flowserve products should be aware that Flowserve products might be used in numerous applications under a wide variety of industrial service conditions. Although Flowserve can provide general guidelines, it cannot provide specific data and warnings for all possible applications. The purchaser/user must therefore assume the ultimate responsibility for the proper sizing and selection, installation, operation, and maintenance of Flowserve products. The purchaser/user should read and understand the Installation Instructions included with the product, and train its employees and contractors in the safe use of Flowserve products in connection with the specific application.

While the information and specifications contained in this literature are believed to be accurate, they are supplied for informative purposes only and should not be considered certified or as a guarantee of satisfactory results by reliance thereon. Nothing contained herein is to be construed as a warranty or guarantee, express or implied, regarding any matter with respect to this product. Because Flowserve is continually improving and upgrading its product design, the specifications, dimensions and information contained herein are subject to change without notice. Should any question arise concerning these provisions, the purchaser/user should contact Flowserve Corporation at any one of its worldwide operations or offices.

©2025 Flowserve Corporation. All rights reserved. This document contains registered and unregistered trademarks of Flowserve Corporation. Other company, product, or service names may be trademarks or service marks of their respective companies.

VAIOM002062 (EN/LTR) February 2025
(Legacy# KMENIM3202)